







## CANDO Diagnostic List HINO\_v8.68

Remark:

1. √ : means that the system has this function

2. - : means that the system does not have this function

3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Function							
			Version Info.	Read DTC	Histry DTC	Clear DTC	Read Data Stream	Action test	Special Function	Remarks (Other functions)
Hino	Engine system (KWP communication)	J08EUL Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test and vehicle speed limit setting function
Hino	Engine system (KWP communication)	J08EUT Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test and vehicle speed limit setting function
Hino	Engine system (KWP communication)	J08EUU Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test and vehicle speed limit setting function
Hino	Engine system (KWP communication)	J05ETF Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test and vehicle speed limit setting function
Hino	Engine system (KWP communication)	E13CVC Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test and vehicle speed limit setting function
Hino	Engine system (KWP communication)	Training Board	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test and vehicle speed limit setting function
Hino	Engine system (KWP communication)	A09C	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	A09CTJ	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	A09CTK	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J05ETB Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J05ETA Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	P11CUN Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J08ETM Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J05ETG Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	P11CUP Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	E13CUV Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J08ETH Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J08ETG Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J08EUK Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	P11CUT Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	N04CUA Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J08EUM Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J05ETH Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J08EUN Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	P11CUU Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	P11CCNG	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function



## CANDO Diagnostic List HINO\_v8.68

Remark:

1. √ : means that the system has this function

2. - : means that the system does not have this function

3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Function							
			Version Info.	Read DTC	Histry DTC	Clear DTC	Read Data Stream	Action test	Special Function	Remarks (Other functions)
Hino	Engine system (KWP communication)	J05CCNG	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J05EUP	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test and vehicle speed limit setting function
Hino	Engine system (KWP communication)	P11C-VP	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test and vehicle speed limit setting function
Hino	Engine system (KWP communication)	P11C-VU	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test and vehicle speed limit setting function
Hino	Engine system (CAN communication)	A09C-TH engine	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-
Hino	Engine system (KWP communication)	J08EWM Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J08EWL Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J08EWK Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J08EWJ Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (KWP communication)	J08EWH Engine	√	√	√	√	√	√	DPR state check, DPR state reset, DPR differential pressure detection	Read and Write injector data, Boost test function
Hino	Engine system (CAN communication)	E13CYL	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	P11C-VP	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	P11C-VR	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	A09C-UK	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UA (200MPa)	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UB (200MPa)	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UL (200MPa)	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UH (200MPa)	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UA (200Mpa)	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UB (200Mpa)	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UB (200Mpa)	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UC (200Mpa)	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UD (200Mpa)	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UD (200Mpa)	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UA (200Mpa)	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UB (200Mpa)	√	√	-	√	√	√	Injector Compensation; DPR Status; Reset all DPR status; Forced DPR regeneration; Differential pressure check.	-



## CANDO Diagnostic List HINO\_v8.68

Remark:

1. √ : means that the system has this function

2. - : means that the system does not have this function

3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Function							
			Version Info.	Read DTC	Histry DTC	Clear DTC	Read Data Stream	Action test	Special Function	Remarks (Other functions)
Hino	Engine system (CAN communication)	A09C-UB (200Mpa)	√	√	-	√	√	√	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UC (200Mpa)	√	√	-	√	√	√	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UD (200Mpa)	√	√	-	√	√	√	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-UD (200Mpa)	√	√	-	√	√	√	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.	-
Hino	Engine system (CAN communication)	J08E-VV	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J05E-UN	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J05E-UM	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	P11C-VN	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	P11C-VN	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J05E-TJ	-	√	-	√	√	√	-	-
Hino	Engine system (KWP communication)	S05C	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	S05D	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	S05DC LEV	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N04CTE (DPR)	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N04CTB (DPR)	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N04CTB (DPR)	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	S05DD (DPR)	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N04CTG (DPR)	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N04CTA (DPNR) /Common rail	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N05CTA (DPNR) /Common rail	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N04CTD (DPR) /E (H EV) /Common rail	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N04CTB (DPR) /Common rail	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N04CTF /Common rail	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N04CTD (DPR) /Common rail	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N04CTB (DPR) /Common rail	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N04CTC (DPR) /Common rail	√	√	√	√	√	√	-	Read and Write injector data



## CANDO Diagnostic List HINO\_v8.68

Remark:

1. √ : means that the system has this function

2. - : means that the system does not have this function

3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Function							
			Version Info.	Read DTC	Histry DTC	Clear DTC	Read Data Stream	Action test	Special Function	Remarks (Other functions)
Hino	Engine system (KWP communication)	N04C (DPR) /Common rail	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	J05DTB (DPR) /Common rail	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	S05DD (DPR) /Common rail	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N04CTC (DPR) /Common rail	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	N04CTB (DPR) /Common rail	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	S05CTB (16bit Common rail)	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (KWP communication)	Hino engine	√	√	√	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTK engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CT engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTQ engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTR engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTS engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTU engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTP engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTW engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTT engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTV engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTM engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTH engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTJ engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTN engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CTL engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CUD engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CUE engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CUJ engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CUH engine	-	√	-	√	√	√	-	Read and Write injector data



## CANDO Diagnostic List HINO\_v8.68

Remark:

1. √ : means that the system has this function

2. - : means that the system does not have this function

3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Function							
			Version Info.	Read DTC	Histry DTC	Clear DTC	Read Data Stream	Action test	Special Function	Remarks (Other functions)
Hino	Engine system (CAN communication)	N04CUK engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	N04CUG engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	Engine DENSO engine	-	√	-	√	√	√	-	Read and Write injector data
Hino	Engine system (CAN communication)	E13C-VH engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	E13C-VJ engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	E13C-VK engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	E13C-VL engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J08E-VC engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J08E-VB engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	A09C-TL engine	√	√	-	√	√	√	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-TM engine	√	√	-	√	√	√	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-TP engine	√	√	-	√	√	√	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.	-
Hino	Engine system (CAN communication)	A09C-TR engine	√	√	-	√	√	√	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.	-
Hino	Engine system (CAN communication)	E13C-VM engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	E13C-VN engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	E13C-VP engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	E13C-VR engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	E13C-VS engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J07E-TM engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J07E-TL engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J07E-TK engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J08E-VH engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J08E-VF engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J08E-VG engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J07E-TS engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	A09C-TU engine	√	√	-	√	√	√	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.	-



## CANDO Diagnostic List HINO\_v8.68

Remark:

1. √ : means that the system has this function

2. - : means that the system does not have this function

3. compared with the last version, the new added function is marked in red color.

Model	System	System type	Function							
			Version Info.	Read DTC	Histry DTC	Clear DTC	Read Data Stream	Action test	Special Function	Remarks (Other functions)
Hino	Engine system (CAN communication)	A09C-TT engine	√	√	-	√	√	√	Injector Compensation;DPR Status;Reset all DPR status;Forced DPR regeneration;Differential pressure check.	-
Hino	Engine system (CAN communication)	J07E-TR engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J07E-TP engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J07E-TN engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J08E-VE engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J08E-VD engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	J08E-VB engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	Engine DENSO engine	-	√	-	√	√	√	-	-
Hino	Engine system (CAN communication)	Engine BOSCH engine	-	√	-	√	√	√	-	-
Hino	SRS		-	√	-	√	√	-	-	-
Hino	VCS		-	√	-	√	√	-	-	-
Hino	Immobilizer		-	√	-	√	√	-	-	-
Hino	Suspension system		-	√	√	√	√	√	-	-
Hino	Transmission		-	√	-	√	√	-	-	-
Hino	Pro-shift		-	√	-	√	-	-	-	-
Hino	EBS		-	√	-	√	√	-	-	-
Hino	ABS		-	√	-	√	√	√	-	-
Hino	Divided according to the vehicle type	ABS (weboc)	-	√	-	√	-	-	-	-
Hino	Divided according to the vehicle type	ABS (weboc)	-	√	-	√	-	-	-	-
Hino	Divided according to the vehicle type	AT	-	√	-	√	√	-	-	-
Hino	Divided according to the vehicle type	Proshift	-	√	-	√	-	-	Frequency Of Mode Use, Clock Setup	-
Hino	Divided according to the vehicle type	SRS Airbag (DUTRO/RANGER)	-	√	√	√	-	-	-	-
Hino	Divided according to the vehicle type	SRS Airbag (PROFIA)	-	√	√	√	-	-	-	-